

Remove/Replace ACMAXX LCD Protector Instruction



STEP 1.

Use a hair dryer to blow heat at the edge of the ACMAXX protector for 25-30 seconds. Keep distance of the hair dryer from the protector about 5 inch/10cm.

Note: Please DO NOT OVER HEAT protector or your camera. It might cause damage.



STEP 2.

While blowing heat to the protector, try to remove the protector with your finger nail. It should be easily lift-off from your camera.



STEP 3.

Use your finger to remove the protector. **DO NOT use any sharp tool to remove it because it might cause damage.**



STEP 4.

Carefully remove the protector from your camera. Now you can clean or replace a new ACMAXX protector.

